



**Pentair
Water**

PRF 368 Valve

TABLE OF CONTENTS

MANUAL OVERVIEW

How To Use This Manual

Icons That Appear In This Manual

 


 
WARNING: Failure to follow this instruction can result in personal injury or damage to the equipment.

NOTE: This will make the process easier if followed.


Inspection

SAFETY INFORMATION

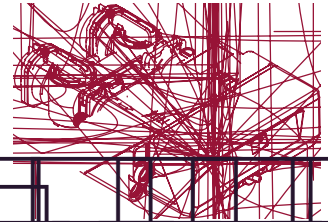

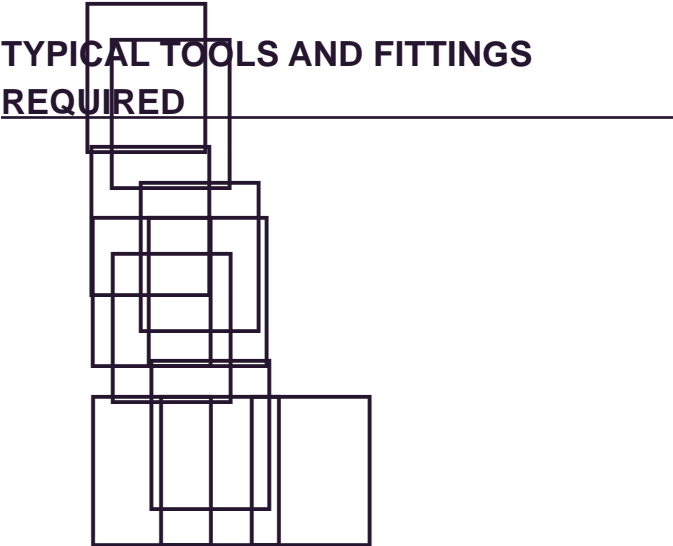

VALVE DIMENSIONS- 368

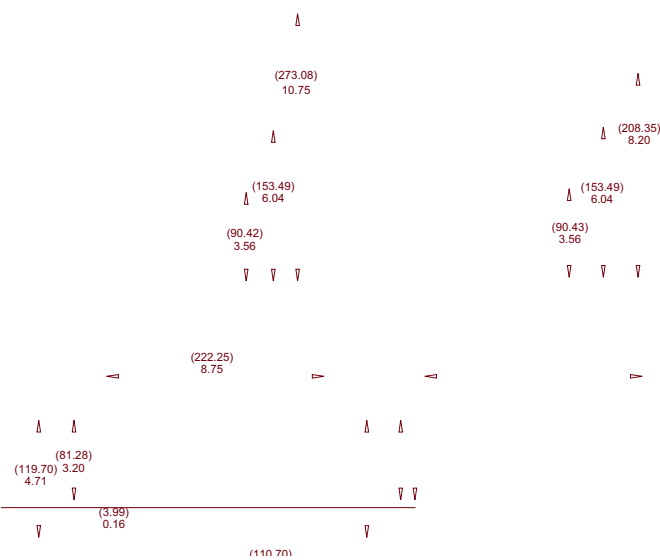 


SPECIFICATIONS

Flow Rates (Valve Only)


Valve Connections

Options/Accessories (6" to 10" diameter tanks)

 
SERVICE $C_v = 4.3$

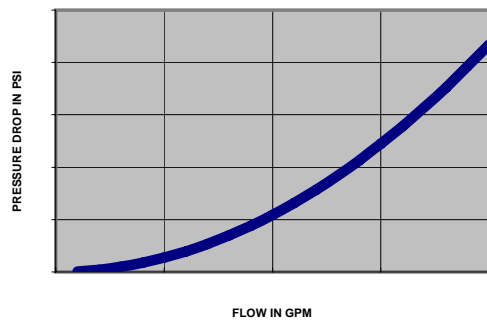


BW $C_v = .56$

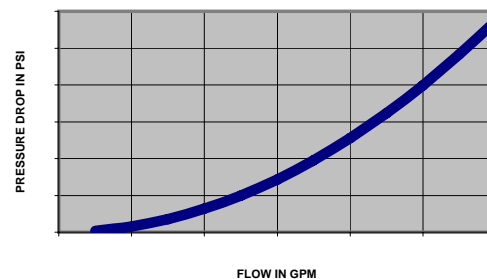 

SERVICE $K_v = 3.7$

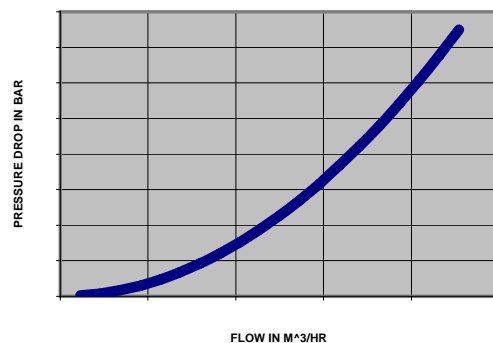 

BW $K_v = 0.48$

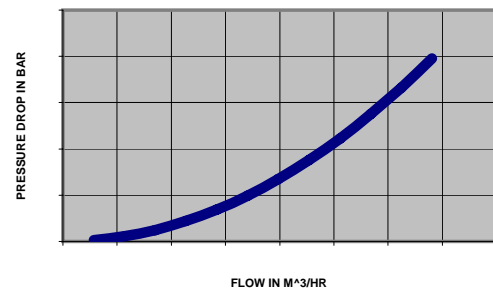 


EQUIPMENT INSTALLATION

General Warnings And Safety Information
Electrical


System Recharge Cycles

Mechanical

 General

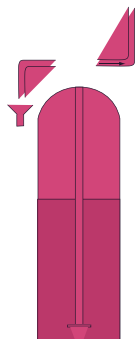


EQUIPMENT INSTALLATION *continued*

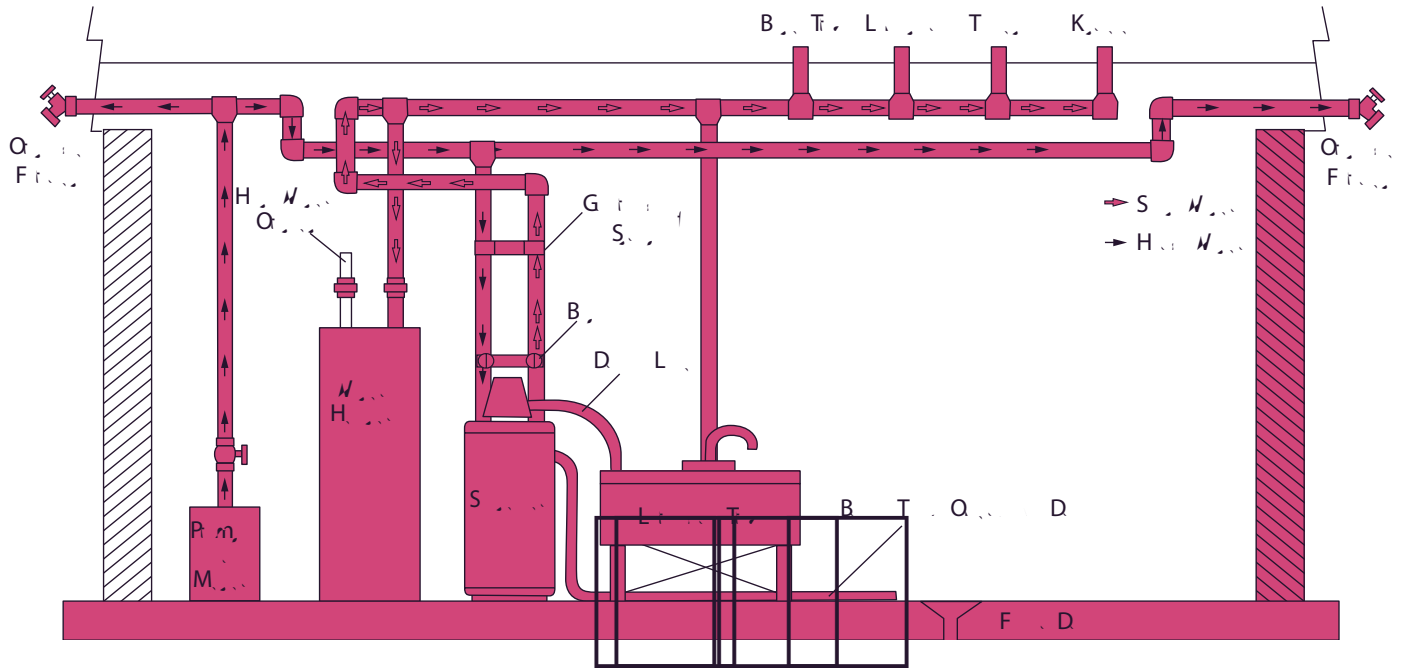 



EQUIPMENT INSTALLATION *continued*

Grounding the Blurring

 Valve Layout

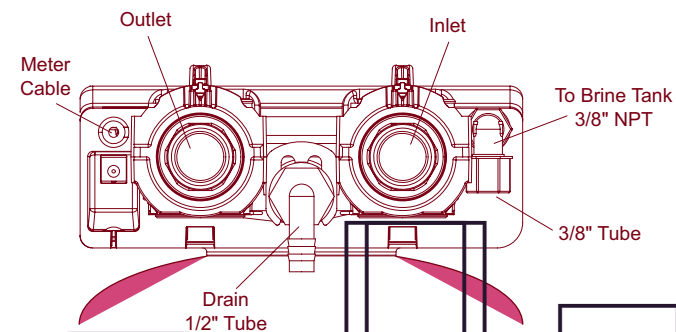


Drain Line Flow Control

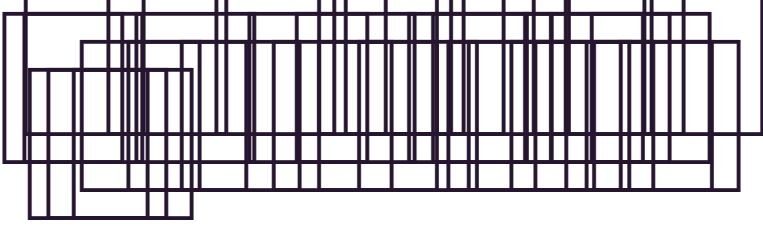  

EQUIPMENT INSTALLATION *continued*

 Salt Line Connection

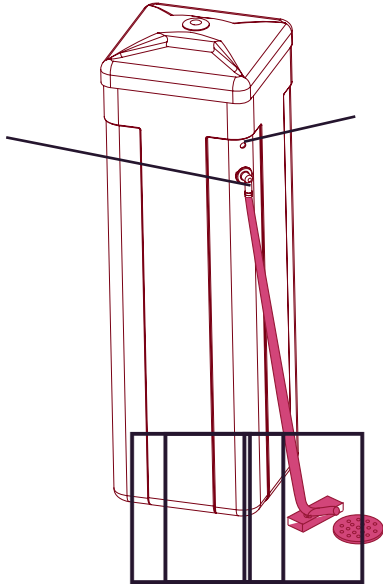

CONTROL OPERATION & LAYOUT

Large LED Display

Camshaft Indicator

Manual Regen Button

Time Button

 
Salt Button

 
Hardness Button

 
 
Flow Indicator

 
 
Power Loss Memory Retention

NOTE: All other programmed parameters are stored in
outages. Flash memory retention is 100 years

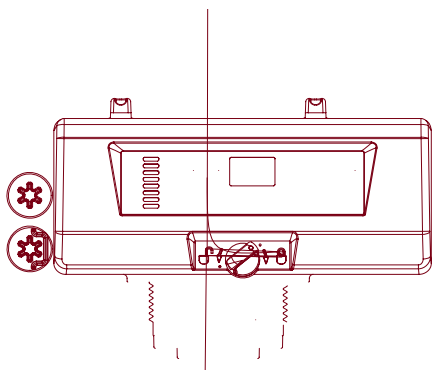

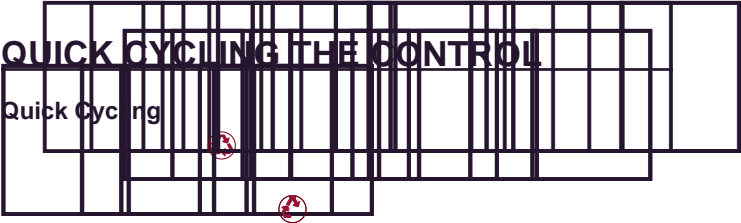

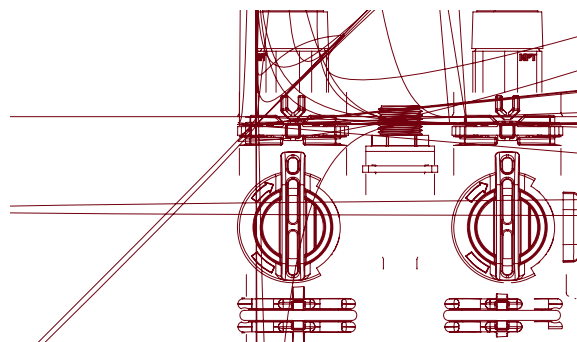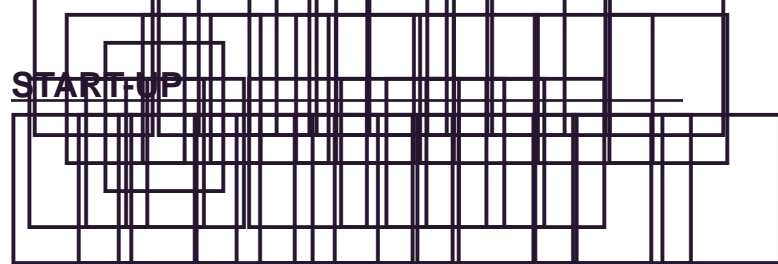

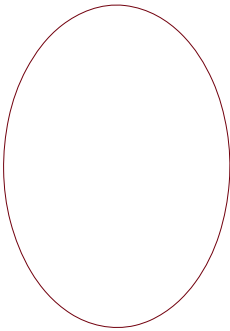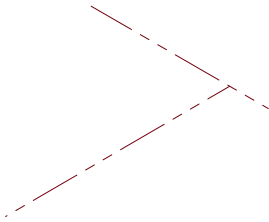

VALVE ASSEMBLY - 368 *continued*

[illegible][illegible]

Item No.	QTY	Part No.	Description
----------	-----	----------	-------------

[illegible][illegible]

 
604-606 Control - Error Codes

[illegible]


System

SERVICE ASSEMBLIES

Valve Body Assemblies:

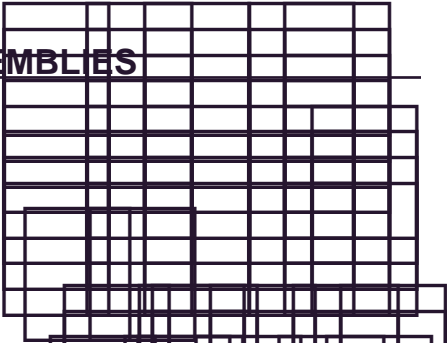


Controllers:

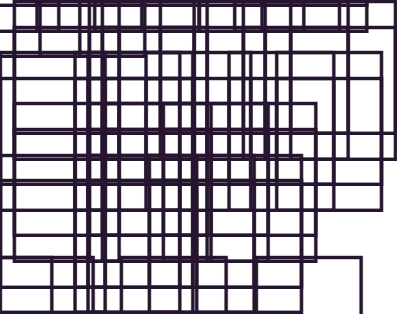 


Motors:



 
Injectors:

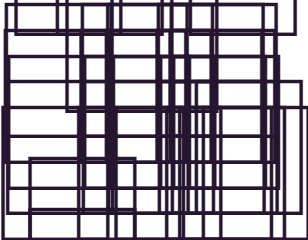


Meters:

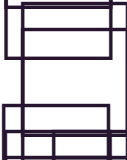 

Bypass/Manifold:

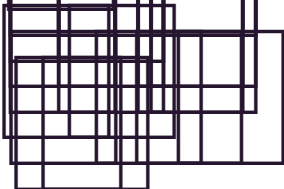 

DLFC:

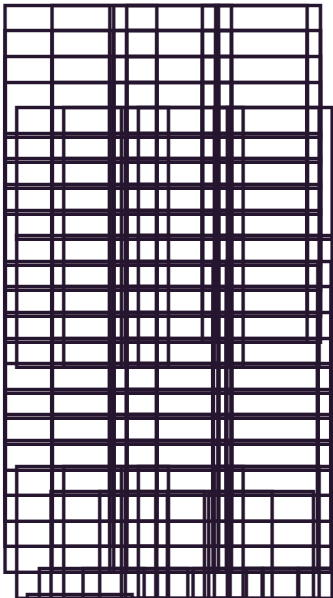 

Fittings/Connectors:



Power:

